

TSE 5000/6000 - FAQ (Frequently Asked Questions)

Batteries

How does the power supply work?

Both components - cylinder and Keypad - need to be supplied with electricity. For the cylinder you need 2 batteries LR6, for the keypad 4 LR6 batteries.

Under no circumstances you may use rechargeable batteries.

What do the three black bars at the center of the screen indicate?

They symbolise the battery level. The small dot on the right is supposed to represent the positive pole of the battery. 3 full, black fields indicate full battery level of the Keypad and the cylinder.

What can I do if the battery indicator varies greatly between individual operations being performed?

Due to high temperature variations (especially outdoors where the keypad is located) the performance of the batteries may vary.