

 


profi  
scale

# TARA



200 g - 40 kg



g/kg  
oz/lb



precision  
±1%  
±100 g


## ProfiScale TARA Digital Scales

**en** Operating instructions

**BURG-WÄCHTER KG**  
Altenhofer Weg 15  
58300 Wetter  
Germany



# profi scale

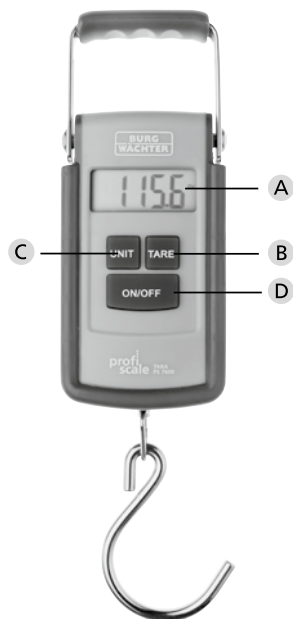

## Introduction

The TARA PS 7600 manual digital scales determines accurately the weight of suitcases, packets, shopped goods and many other things. To make sure that you use the scales appropriately and to maintain for a long life, please read the instructions for use first.

## Remarks

- To obtain an accurate result, hold the scales firmly by the grip when weighing.
- Do not expose the scales to strong shocks or strong pressure.
- Use no chemical detergents to clean the scales. A soft cloth is suitable for cleaning.

## Illustration

- A Display
- B TARE button
- C UNIT button
- D ON/OFF button

## Warranty

### Congratulations!

Thank you for choosing ProfiScale quality measuring technology by BURG-WÄCHTER. BURG-WÄCHTER offers a warranty of 2 years' duration from the date of purchase. The warranty does not cover damage caused by improper use, overloading the device or incorrect storage as well as normal wear and defects that only have an insignificant effect on the value or usability of the device. The warranty shall be immediately invalidated if unauthorized persons work on the device. In the event that a warranty claim arises, please hand over the entire device incl. packaging, description and batteries along with the sales receipt to your dealer.

## Technische Daten

Operating temperature	0°C to 40°C
Storage temperature	-10°C to 60°C
Range of measurement	200g to 40kg
Accuracy	weight up to 10kg: +/- 100g weight above 10kg: +/- 1%
Power supply	2 pcs 1,5V AAA Micro (e. g. LR03)
Weight	180g (excl. batteries)

## Operation

### Power up

- Hold the scales vertically and press ON/OFF.
- At first, the display indicates ----, this indication changes to 0.00 after 2 seconds and the tool is ready for use.
- The tool switches off automatically after 30 seconds.
- When you wish to switch the scales off manually, press ON/OFF.

### Select unit of measure

- Press UNIT to select between g, kg, lb and oz.


### Weighing

- Hang the measured item (e.g. suitcase) on the hook.
- When the weight becomes steady, a signal sounds and the measurement result is displayed.

### Stepwise weighing

- If you wish to determine the weight of an item indirectly, e.g. in a container, place this container on the hook first.
- Press the TARE button in order to set the display back to 0.00.
- Only then put the measured item into the container in order to determine its net weight.
- In case the total weight is too high, "ERR" is indicated in the display. Take the items from the hook immediately in order to avoid damage.

## Battery replacement

 This symbol is indicated when the battery power is insufficient. Open the battery compartment at the back and replace the batteries.

## Disposal of the tool

### Dear customer,

Please help us avoid unnecessary waste. Should you intend to dispose of this device at any time, please remember that many components of this device contain valuable materials, which can be recycled.



Please be aware that electrical and electronic equipment and batteries shall not be disposed of as household waste, but rather collected separately. Please obtain information on the collecting points for electrical waste from the responsible authority of your municipality.



If you have any questions concerning the EC declaration of conformity, please use [info@burg.biz](mailto:info@burg.biz)

Printing and typesetting errors excepted.  
We reserve the right to make technical changes.