

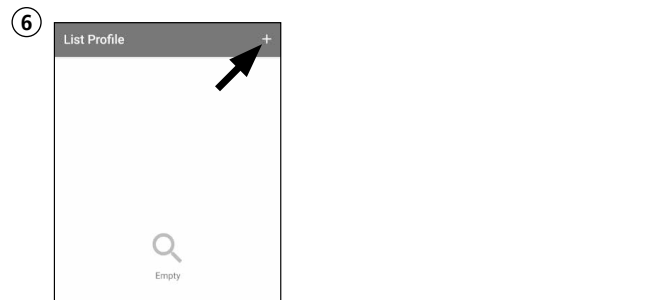
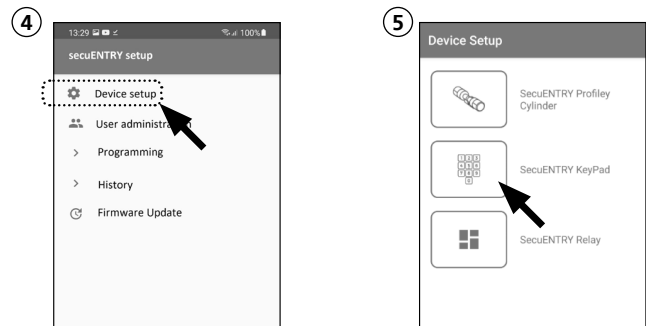
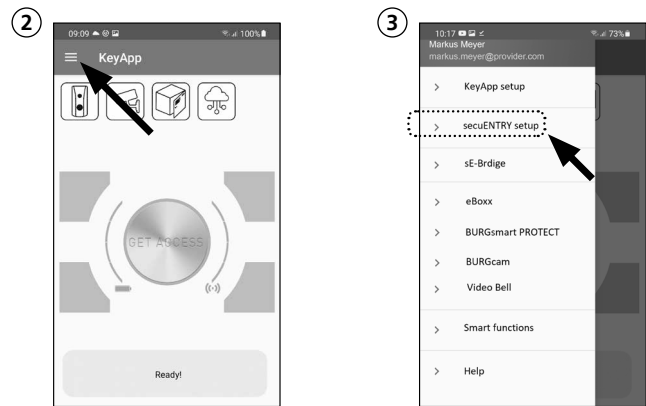
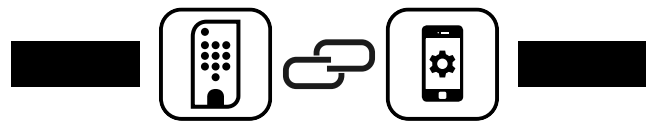
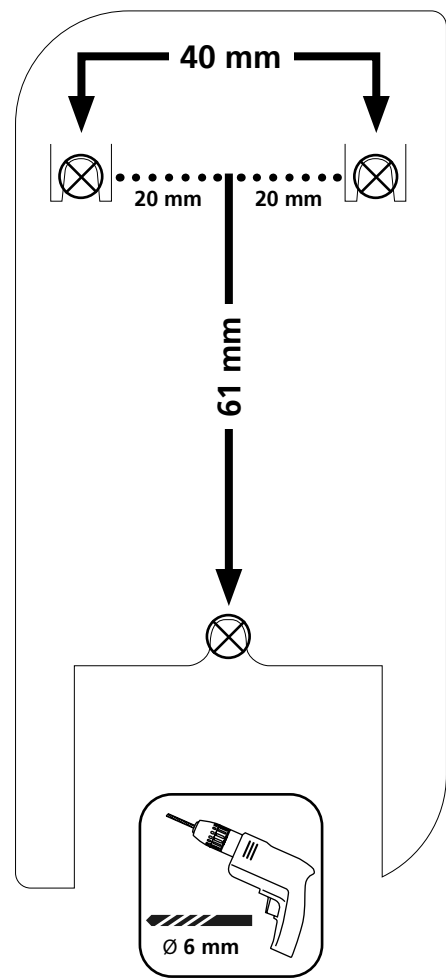
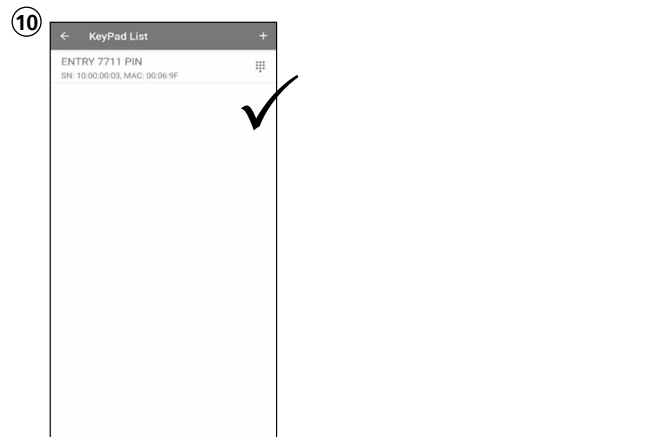







1:1

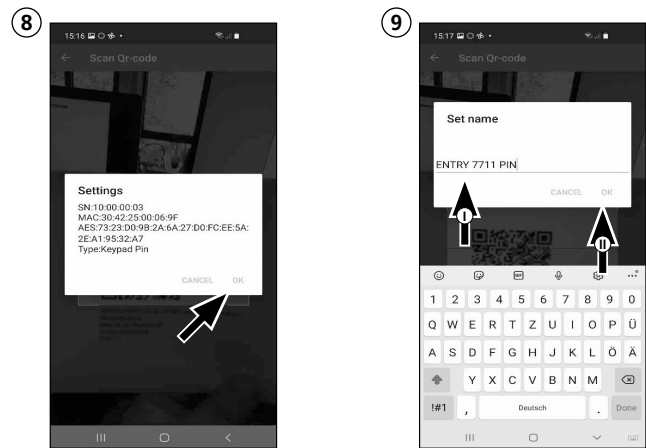




Quick Start  
secuENTRY  
ENTRY 7711 Keypad PIN 1

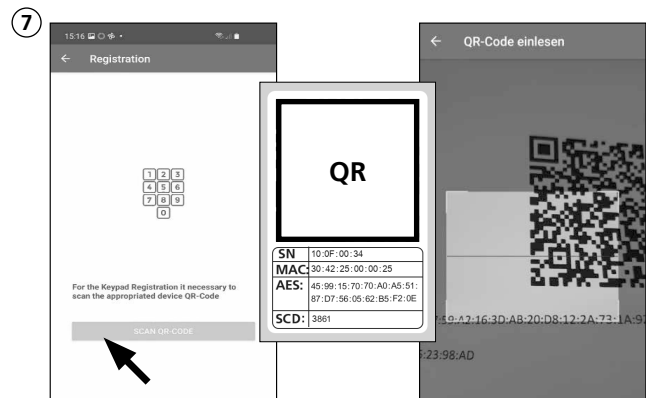





 

Quick Start  
secuENTRY  
ENTRY 7711 Keypad PIN 2

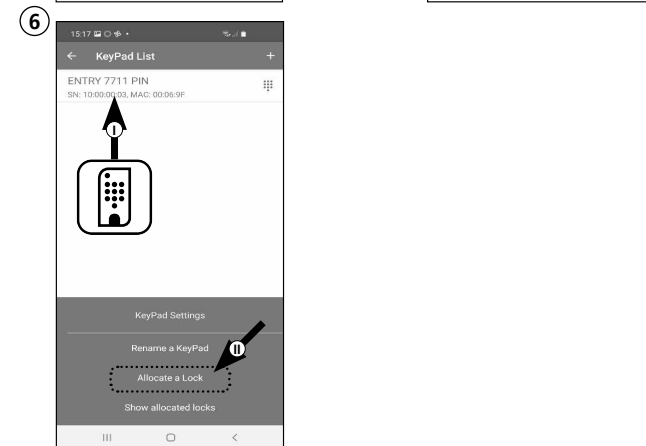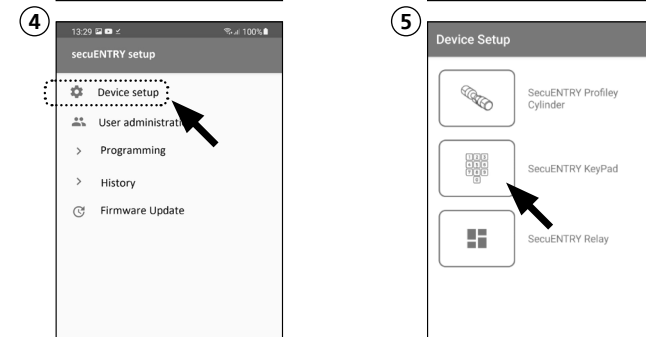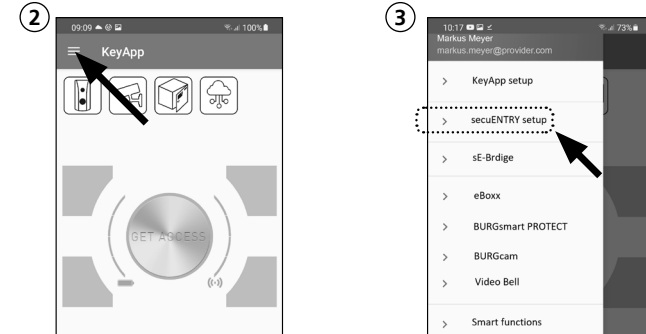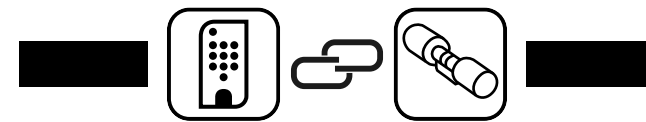

Quick Start  
secuENTRY  
ENTRY 7711 Keypad PIN 3

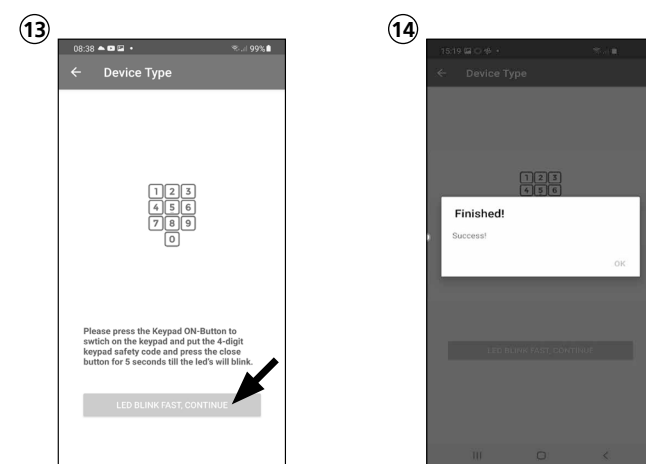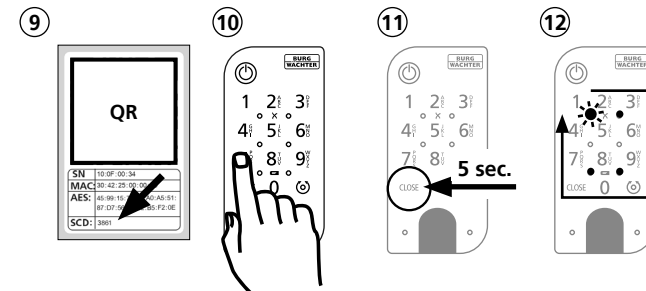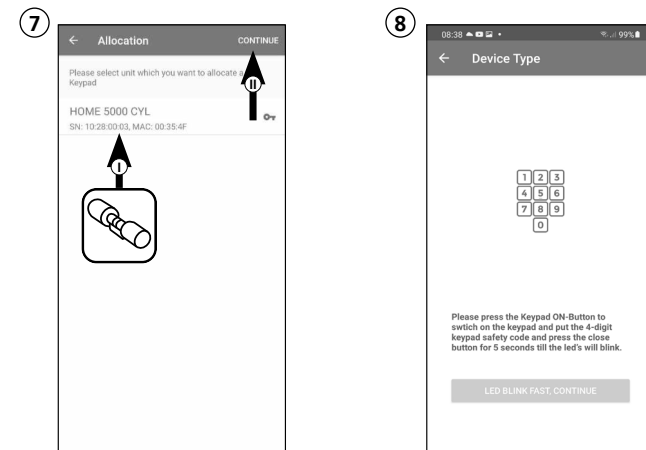

Quick Start  
secuENTRY  
ENTRY 7711 Keypad PIN 4

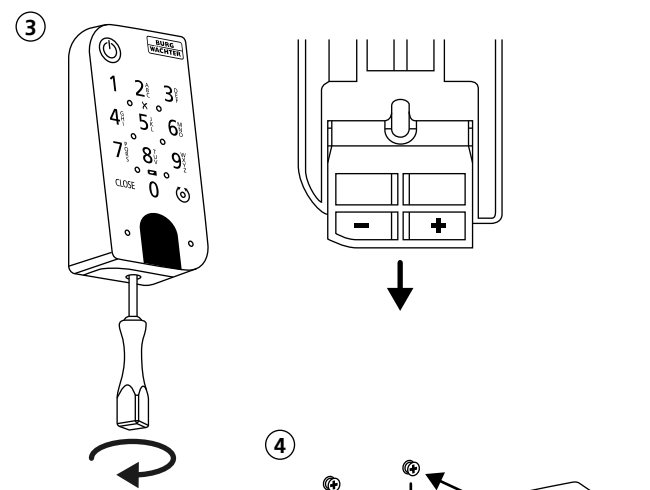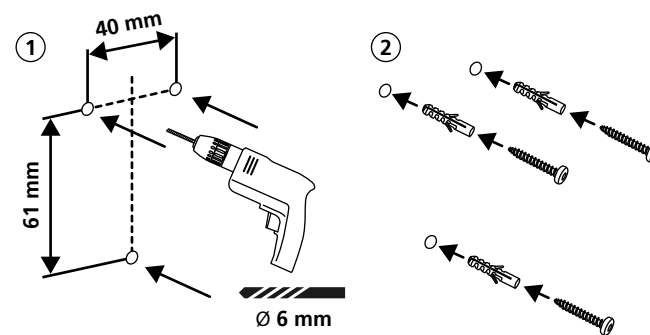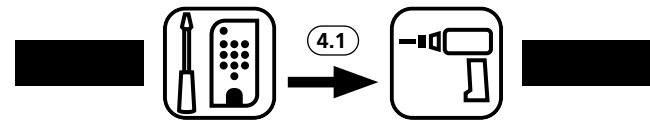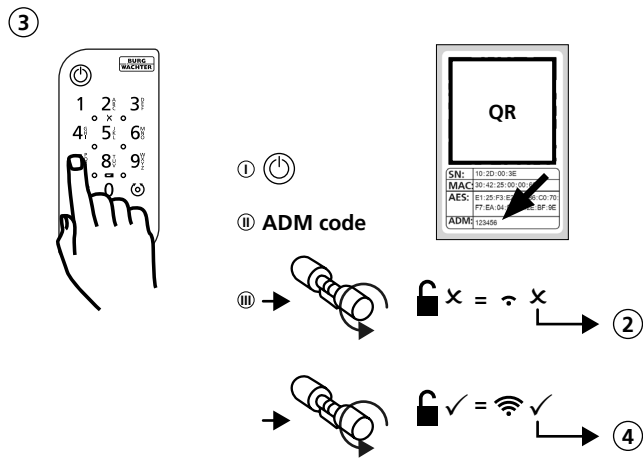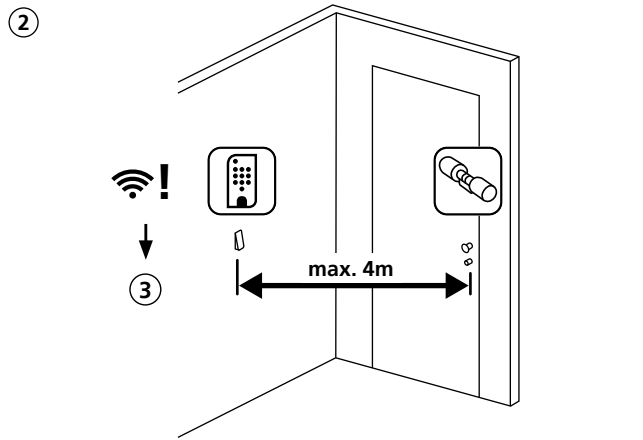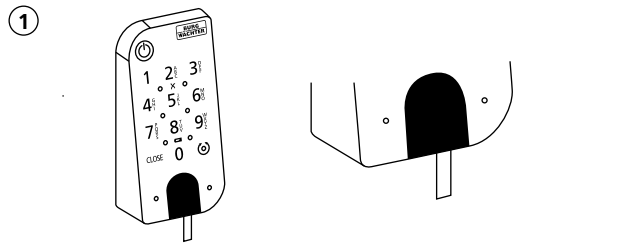

④

