



**BURG
WÄCHTER**

ALWAYS THE
SAFE CHOICE!



Use this simple
ordering system!



VdS



Custom-made security grilles - individual order form

WinProtec



Your custom-fit security lattice window.
Manufactured to Your individual measurements.

www.burg.biz

① Soffit Installation (On the window reveal)


② Front Installation (On the house front)



Tip: Mesh size in between profiles ca. 200 - max. 245 mm


1.1 Soffit Installation

- A)** Specify width and height of grille up until brickwork (To ease installation BURG-WÄCHTER will subtract 5mm each)
- B)** Installation width cover cap: 55 mm in the soffit

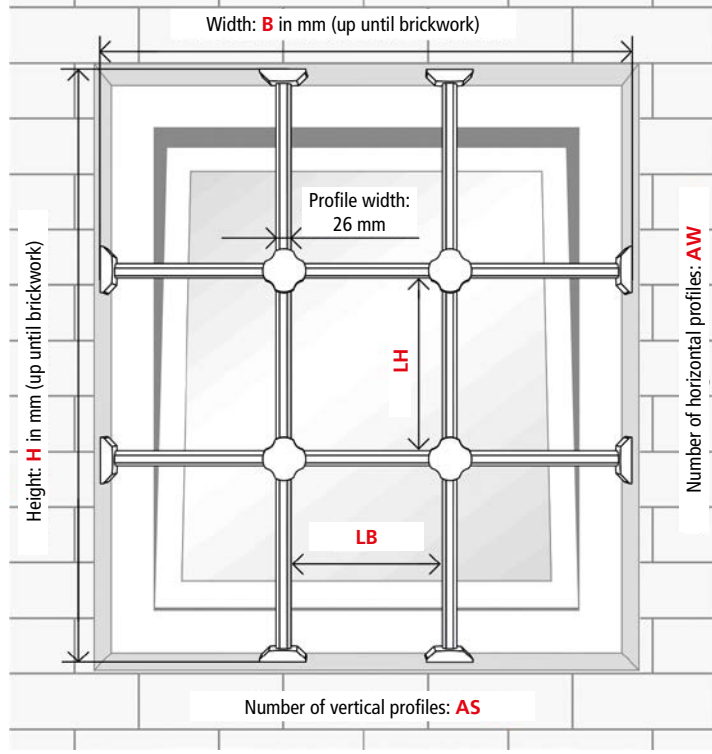


1.2 Soffit Installation - Fastening only on the side (Rung apportionment)

- A)** Specify width from grille up until brickwork (To ease installation BURG-WÄCHTER will subtract 5mm each)
- B)** Specify height of grille up until end of cover cap

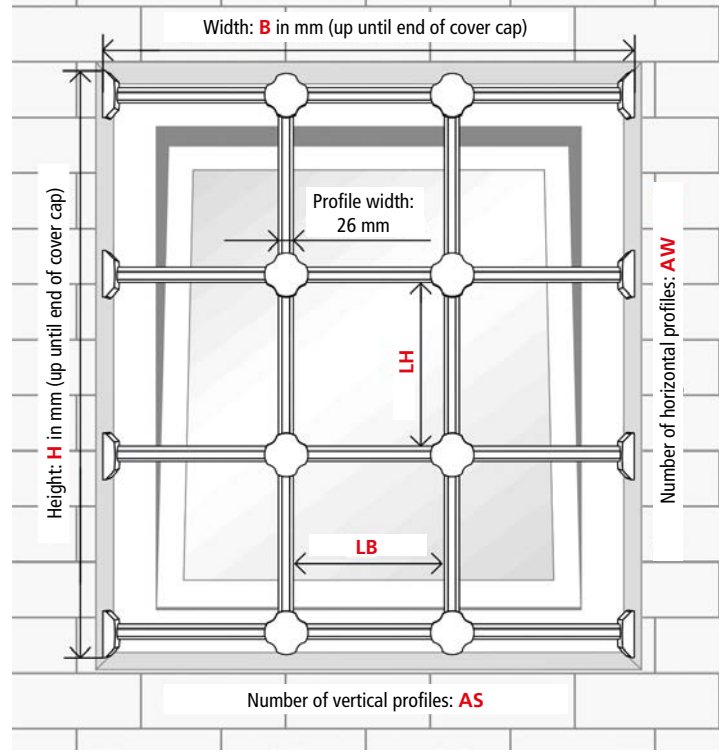


2.1 Front Installation

- A)** Specify width and height of grille up until outer edge of cover cap. (BURG-WÄCHTER advises 100mm overlap for front installation on each side)

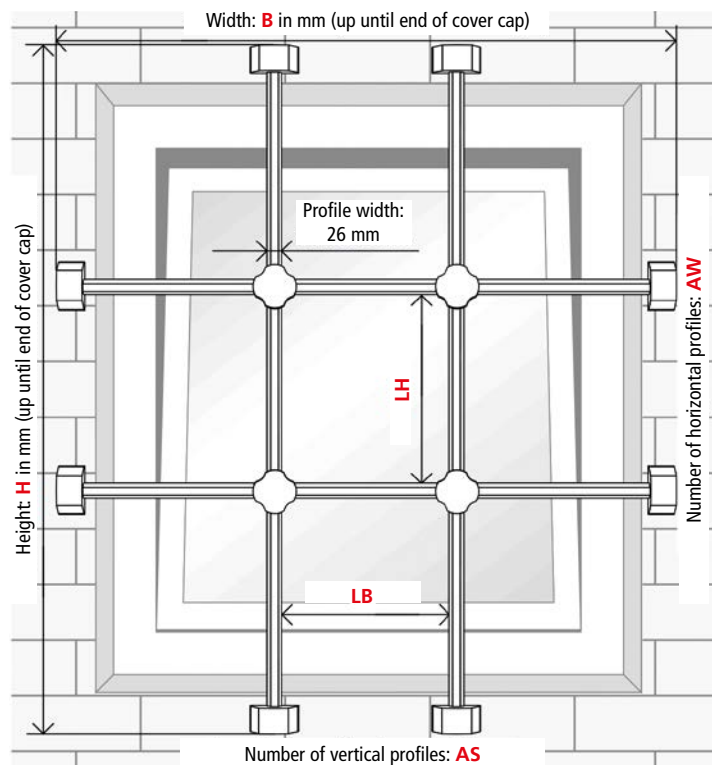

2.2 Front Installation - Fastening only on the side (Rung apportionment)

- A)** Specify width and height of grille up until outer edge of cover cap. (BURG-WÄCHTER advises 100mm overlap for front installation on each side)
- B)** Specify height of grille up until end of cover cap

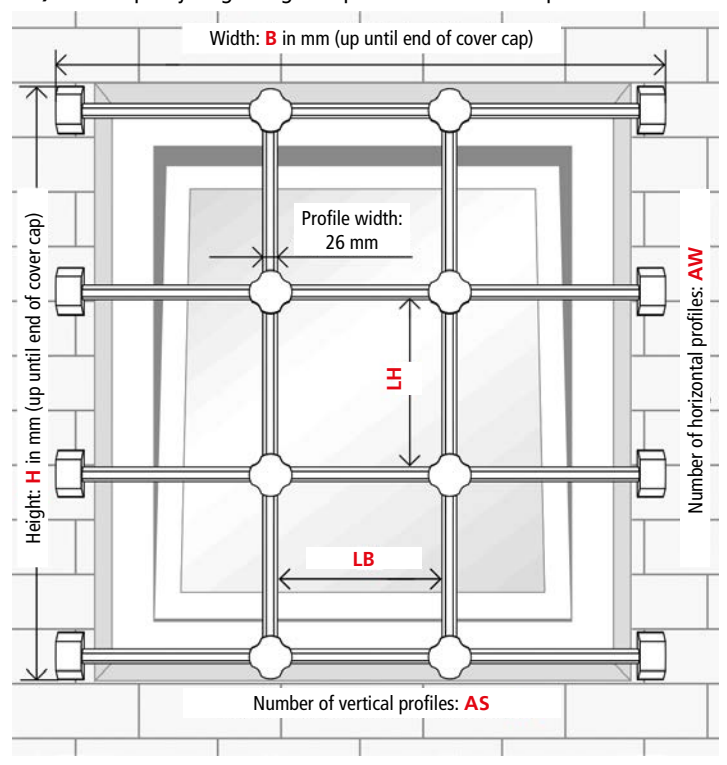





Choose the ideal installation type - For Your security grille

3 Frame Installation (On the window frame)

4 Casement Installation (On the casement)



Tip: Mesh size in between profiles ca. 200 - max. 245 mm

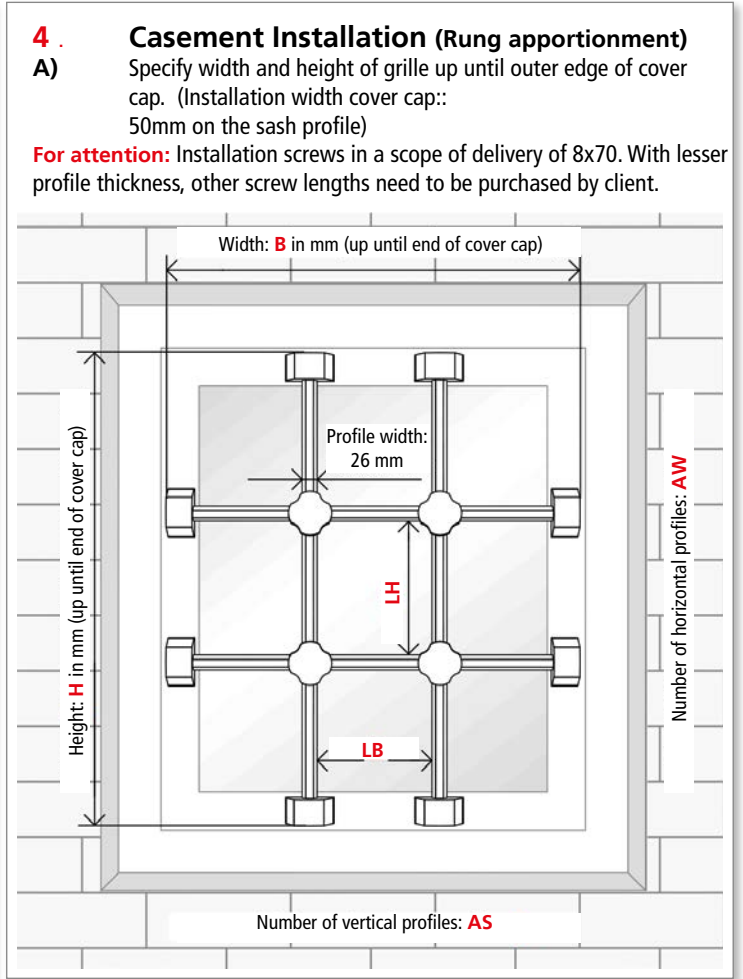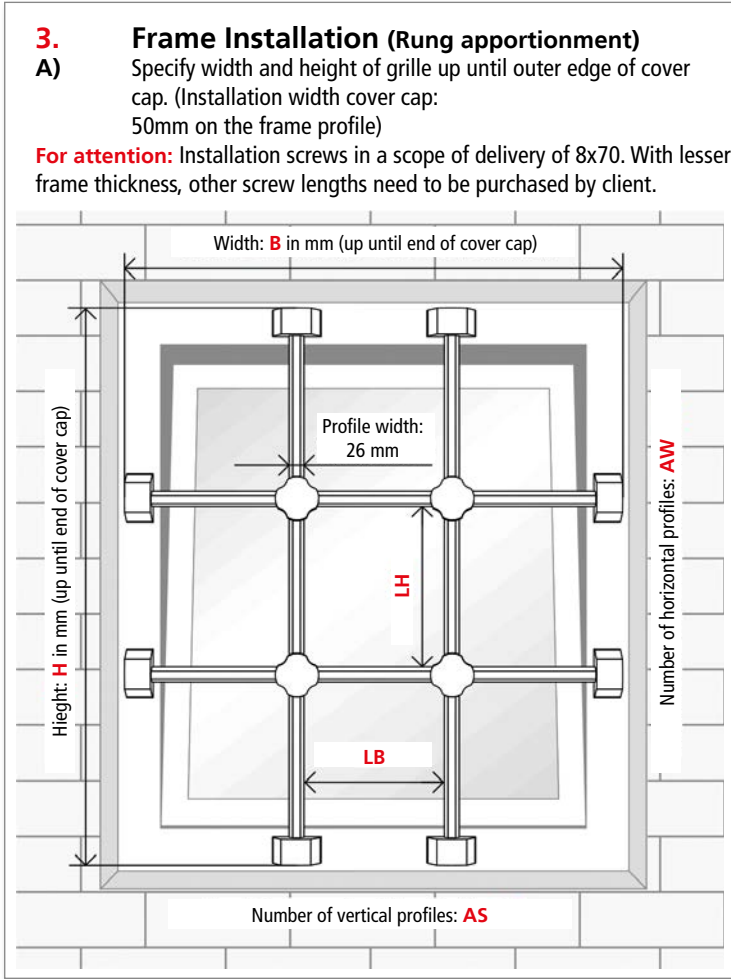

1.

Offer
 Order

2.

Please list the determined measurements and quantity here

3.

Please fill in the remaining table fields (see red marks).



ser. no. Grille	Installation type (e.g. 2A)	Width in mm B	Height in mm H	Quantity vertical profiles: AS	Quantity horizontal profiles: AW	clear width in mm: LB	clear height in mm: LH
1							
2							
3							
4							

ser. no. Grille	lfd. Meter WP-Profile with/without WP-SK steel centre-locking pin	Intersection incl. Installation WP-MS 101	End fastening WP-MS 102 SB	Shipping + Packaging	Sum
1					
2					
3					
4					

Linear metres profiles/steel centre-locking pins will be calculated per commencing metre.

4.

Client

Name / Address / Phone / Fax / Mail

Date/ Branch Office



Suggestion for ideal apportionment of Your security grille

WinProtect - the variable security grille




Window Height incl. frame	Window Width incl. frame	up to 700 mm	up to 800 mm	up to 900 mm	up to 1000 mm	up to 1100 mm	up to 1200 mm	up to 1300 mm	up to 1400 mm	up to 1500 mm
up to 700 mm	Apportionment									
up to 800 mm	Apportionment									
up to 900 mm	Apportionment									
up to 1000 mm	Apportionment									
up to 1100 mm	Apportionment									
up to 1200 mm	Apportionment									
up to 1300 mm	Apportionment									
up to 1400 mm	Apportionment									
up to 1500 mm	Apportionment									
up to 1600 mm	Apportionment									
up to 1700 mm	Apportionment									
up to 1800 mm	Apportionment									
up to 1900 mm	Apportionment									
up to 2000 mm	Apportionment									
up to 2100 mm	Apportionment									

Your window grille - ordered quickly and easily!

- ✓ Please fill in the order form completely!
- ✓ Suggestions for apportionment of your security grille ease the choice.
- ✓ Always choose the installation type that is the most stable fastening possibility! (usu. front or soffit)
- ✓ Please consider existing rolling shutters when choosing the installation type.
- ✓ For frame- or casement installation: Please check if the installation screws can be screwed in easily and that they e.g. do not damage the fitting parts.
- ✓ The casement installation is only recommended for terrace- resp. front doors with glass section.
- ✓ For front installation: is there an existent window sill and can the security grille with its bottom end fastening and the cover cap B be screwed into the sill?
- ✓ If the grille, at the bottom (e.g. due to a sill that should not be spudded) and/or at the top (e.g. due to a shutter box) cannot be screwed in, the grille should be installed as displayed in sketch no. 1.2 or 2.2 (see inner surface). The grille will only be fastened sideways.
- ✓ BURG-WÄCHTER manufactures the outer measurements of Your grille with a tolerance of 0 mm - 3 mm.

WP-Bestellformular 0516

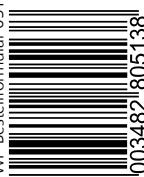

4 003482 805138